CHANGAN PARTS CATALOG

CHONGQING SIAS

a 0086-23-8671 6687



ales@cqsias.com



www.cqsias.com

Parts Number	Description	Model
PC201012-0501	ELEMENT, AIR FILTER	HUNTER / F70
PC201024-2602	FUEL FILTER ELEMENT	HUNTER / F70
PC201013-4501	OIL FILTER	HUNTER / F70
PC201098-1202	AIR FILTER,A/C	HUNTER / F70
PC201194-0101	PANEL ASSY, FR HOOD	HUNTER / F70
PC201194-0201	PANEL ASSY,FR DOOR,LH	HUNTER / F70
PC201194-0301	PANEL ASSY,FR DOOR,RH	HUNTER / F70
PC201194-0401	PANEL ASSY,RR DOOR,LH	HUNTER / F70
PC201194-0501	PANEL ASSY,RR DOOR,RH	HUNTER / F70
PH201131-0204	FR BUMPER	HUNTER / F70
PC201060-0101	ABSORBER & STRUT ASSY, FR SUS, LH	HUNTER / F70
PC201060-0201	ABSORBER & STRUT ASSY, FR SUS, RH	HUNTER / F70
PC201050-1001	HUB WITH BEARING, FR WHEEL	HUNTER / F70
PC201050-1002	HUB WITH BEARING, FR WHEEL	HUNTER / F70
PC201060-2101	BAR, FR STABILIZER	HUNTER / F70
PH201131-0302	GRILL, FR BUMPER, UPPER	HUNTER / F70
PC201041-0252	ALUMINUM WHEEL	HUNTER / F70

PC201093-0602 PC201093-0801	BLADE ASSY,FR WIPER,MAIN ARM ASSY,FR WIPER,SUB	HUNTER / F70
	ARM ASSV ER WIDER SLIB	
DC204002 0002	ANIVI ASSIJI IN VVII ENJOOD	HUNTER / F70
PC201093-0902	BLADE ASSY,FR WIPER,SUB	HUNTER / F70
PC201093-0601	BLADE ASSY,FR WIPER,MAIN	HUNTER / F70
PC201093-0901	BLADE ASSY,FR WIPER,SUB	HUNTER / F70
PC201016-0101	RADIATOR ASSY	HUNTER / F70
PC201016-0201	FAN ASSY,RADIATOR	HUNTER / F70
PC201097-0101	CONDENSER ASSY	HUNTER / F70
PK201095-0101	COMPRESSOR ASSY	HUNTER / F70
PC201020-0601	STARTER	HUNTER / F70
PC201019-1901	GENERATOR-ALTERNATOR	HUNTER / F70
PC201155-0207	MIRROR ASSY,REARVIEW,LH	HUNTER / F70
PK201155-0407	MIRROR ASSY,REARVIEW,RH	HUNTER / F70
PC201060-2501	CONNECTING LEVER, FR STAB BAR,LH	HUNTER / F70
PC201060-2601	CONNECTING LEVER, FR STAB BAR,RH	HUNTER / F70
PH201072-0102	LOCK SET	HUNTER / F70
PC201016-0501	HOSE, RADIATOR, INLET	HUNTER / F70
PC201016-0701	HOSE, RADIATOR, OUTLET	HUNTER / F70
PC201016-0801	WATER TANK	HUNTER / F70
PC201094-0101	WATER TANK ASSY, WASHER	HUNTER / F70
PC201080-1301	LAMP, HIGH MOUNTED BRAKE	HUNTER / F70
PC201132-0701	UPPER GRILL, FR BUMPER,LH	HUNTER / F70
PC201132-0801	UPPER GRILL, FR BUMPER,RH	HUNTER / F70
PC201131-1001	SIDE BRACKET, FR BUMPER, LH	HUNTER / F70
PC201131-1401	SIDE BRACKET, FR BUMPER, RH	HUNTER / F70
PC201019-4203-A1	BELT	HUNTER / F70
PC201015-0501	WATER PUMP ASSY	HUNTER / F70
PC201060-2401	BUSH,FR STABILIZER BAR	HUNTER / F70
PC201065-1301	BUSH, RR SHACKLE	HUNTER / F70
PC201049-0401	SENSOR ASSY,FR WHEEL, LH	HUNTER / F70
PC201049-0501	SENSOR ASSY,FR WHEEL, RH	HUNTER / F70
PC201049-0601	SENSOR ASSY,RR WHEEL, LH	HUNTER / F70

PC201049-0701 SENSOR ASSY,RR WHEEL, RH PC201111-0901 CONTRONLER,AIRBAG PC201111-1101 IMPACT SENSOR ASSY, FR PC201071-0108 LAMP SWITCH ASSY, COMBINATION PC201073-0101 SWITCH ASSY,POWER WINDOW,MAIN PC201073-0201 SWITCH ASSY,POWER WINDOW,SUB PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC2011128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201004-1201 OIL SEAL, FR PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201080-0304 HEAD LAMP ASSY, LH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201048-0902 CABLE ASSY,GEAR SELECT & SHIFT C	_
PC201111-1101 IMPACT SENSOR ASSY, FR PC201071-0108 LAMP SWITCH ASSY, COMBINATION PC201073-0101 SWITCH ASSY,POWER WINDOW,MAIN PC201073-0201 SWITCH ASSY,POWER WINDOW,SUB PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201004-1201 OIL SEAL, FR PC201004-1201 OIL SEAL, FR PC201004-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201071-0108 LAMP SWITCH ASSY, COMBINATION PC201073-0101 SWITCH ASSY,POWER WINDOW,MAIN PC201073-0201 SWITCH ASSY,POWER WINDOW,SUB PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201004-1201 OIL SEAL, FR PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0802 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER	HUNTER / F70
PC201073-0101 SWITCH ASSY,POWER WINDOW,MAIN PC201073-0201 SWITCH ASSY,POWER WINDOW,SUB PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0802 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC2011073-0201 SWITCH ASSY,POWER WINDOW,SUB PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, REVERSING RADAR PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201106-0102 BCM ASSY PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO, VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201107-0101 TPMS SENSOR ASSY PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO, VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201110-0101 RF RECEIVER ASSY PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO, VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PC201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201110-0201 GATEWAY ECU ASSY PC201128-0201 LOGO,VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201128-0201 LOGO, VEHICLE NAME PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE, LH PC201048-0902 CABLE, PARKING BRAKE, RH PC201043-1702 CABLE ASSY, GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM, FR SUSPENSSION, RH	HUNTER / F70
PC201105-0101 SENSOR ASSY, REVERSING RADAR PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201105-0201 SENSOR ASSY, REVERSING RADAR PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201105-0301 SENSOR ASSY, REVERSING RADAR PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201105-0404 SENSOR ASSY, REVERSING RADAR PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PH201041-0901 COVER ASSY, ALUMINIUM WHEEL PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY, FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE, LH PC201048-0902 CABLE, PARKING BRAKE, RH PC201043-1702 CABLE ASSY, GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM, FR SUSPENSSION, RH	HUNTER / F70
PC201004-1201 OIL SEAL, FR PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201004-1801-A1 DRAIN PLUG PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201024-0401 CAP ASSY,FUEL FILLER PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201080-0304 HEAD LAMP ASSY, LH PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201080-0504 HEAD LAMP ASSY, RH PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201048-0802 CABLE, PARKING BRAKE,LH PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201048-0902 CABLE, PARKING BRAKE,RH PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201043-1702 CABLE ASSY,GEAR SELECT & SHIFT CONTROL PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201043-1503 GEAR SHIFT AND SLECT CONTROL ASSY PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201060-1201 UPPER ARM,FR SUSPENSSION,RH	HUNTER / F70
	HUNTER / F70
DESCRIPTION OF THE PROPERTY OF	HUNTER / F70
PC201060-0601 UPPER ARM,FR SUSPENSSION,LH	HUNTER / F70
PC201048-0101 LEVER ASSY, PARKING BRAKE	HUNTER / F70
PC201134-0101 LINING, FR WHEEL COVER, LH	HUNTER / F70
PC201134-0501 LINING, FR WHEEL COVER, RH	HUNTER / F70
PC201134-0901 LINING, RR WHEEL COVER, LH	HUNTER / F70
PC201134-1301 LINING, RR WHEEL COVER, RH	HUNTER / F70

PC201060-2001	LOWER ARM,FR SUSPENSSION,RH	HUNTER / F70
PC201060-1301	LOWER ARM,FR SUSPENSSION,LH	HUNTER / F70
PC201060-2201	BRACKET,FR STABILIZER BAR	HUNTER / F70
PC201040-0501	STEERING COLUMN ASSY,LOWER	HUNTER / F70
PC201006-1501	CLUTCH ASSY	HUNTER / F70
PC201013-4101	AIR FLOW METER	HUNTER / F70
PC201013-4201	DIFFERENTIAL PRESSURE SENSOR	HUNTER / F70
PC201011-0501	SENSOR, INTAKE AIR TEMPERATURE	HUNTER / F70
PC201013-3601	WATER TEMPERATURE SENSOR	HUNTER / F70
PC201013-3901	CAMSHAFT POSITION SENSOR	HUNTER / F70
PC201196-0201	CARGOSIDEWALLASSY,LH	HUNTER / F70
PC201196-0301	CARGOSIDEWALLASSY,RH	HUNTER / F70
PC201121-0104	TRIM, FR DOOR, LH	HUNTER / F70
PC201124-0102	TRIM, RR DOOR, LH	HUNTER / F70
PC201026-2102	RELEASE BEARING, CLUTCH	HUNTER / F70
PC201007-0101	OIL SEAL SEAT, CRANKSHAFT,RR	HUNTER / F70
PC201014-0421	EGR COOLER	HUNTER / F70
PC201002-0201-A1	GASKET, CYLINDER HEAD	HUNTER / F70
PC201009-0501	SEAL, VALVE STEM	HUNTER / F70
PC201007-0201	REAR OIL SEAL	HUNTER / F70
PC201013-4901	OXYGEN SENSOR	HUNTER / F70
PC201013-5201	TEMPERATURE SENSOR, DPF	HUNTER / F70
PC201013-5101	TEMPERATURE SENSOR,DOC	HUNTER / F70
PC201014-0420	EGR COOLER GASKET	HUNTER / F70
PC201014-2001-A1	EGR VALVE	HUNTER / F70
PC201189-0252	CARGO DOOR OUTER HANDLE	HUNTER / F70
PC201138-2701	SIDE STEP, RH	HUNTER / F70
PC201137-0101	SIDE STEP, LH	HUNTER / F70
PK201186-0101	GLASS,FR WINDSHIELD	HUNTER / F70
PC201080-0702	LAMP ASSY, RR COMBINATION, LH	HUNTER / F70
PC201080-1002	LALAD ACCOV DD COLADALATICAL DIA	
1 6201000 1002	LAMP ASSY, RR COMBINATION, RH	HUNTER / F70

PC201080-0303	HEAD LAMP ASSY, LH	HUNTER / F70
PC201080-0503	HEAD LAMP ASSY, RH	HUNTER / F70
PC201195-0201	FR FENDER,RH	HUNTER / F70
PC201195-0101	FR FENDER,LH	HUNTER / F70
PC201152-0402	REAR BUMPER DECORATION LH CHROM	HUNTER / F70
PC201152-0602-A1	REAR BUMPER DECORATION RH CHROM	HUNTER / F70
PC201050-0301	PAD,FR BRAKE,LH	HUNTER / F70
PC201053-0301	PAD,FR BRAKE,RH	HUNTER / F70
G201087-0901	CYLINDER ASSY, CLUTCH	HUNTER / F70
PC201194-0601	PANEL,CARGO DOOR	HUNTER / F70
PC201132-1201	FRONT FOG LIGHT COVER LH	HUNTER / F70
PC201132-1301	FRONT FOG LIGHT COVER RH	HUNTER / F70
PC201183-0204	HANDEL OUT FRT DOOR LH	HUNTER / F70
PC201183-0404	HANDEL OUT FRT DOOR RH	HUNTER / F70
PC201185-0203	HANDEL OUT REAR DOOR LH	HUNTER / F70
PC201185-0403	HANDEL OUT REAR DOOR RH	HUNTER / F70
PC201006-0601-A1	CRANK SHAFT	HUNTER / F70
PC201005-0401	PISTONS	HUNTER / F70
PC201005-0501	PISTON PIN	HUNTER / F70
PC201005-0701	CONNECTING ROD	HUNTER / F70
PC201005-1001	CONNECTING ROD BEARING UP	HUNTER / F70
PC201005-0901	CONNECTING ROD BEARING LOW	HUNTER / F70
PC201006-0801	MAIN BEARING UPPER	HUNTER / F70
PC201006-0701	MAIN BEARING LOWER	HUNTER / F70
PC201008-0501	OIL PUMP OUTER ROTOR	HUNTER / F70
PC201008-1001	PIN OIL PUMP	HUNTER / F70
PC201008-0701	INNER ROTOR	HUNTER / F70
PC201008-0901	OIL COVER PUMP	HUNTER / F70
PC201039-0101-B1	DRIVE SHAFT ASSY LH	HUNTER / F70
PC201039-0401	DRIVE SHAFT ASSY RH	HUNTER / F70
PC201036-0102-A1	DRIVE SHFT RETAINER RR	HUNTER / F70
PC201036-0701-A1	DRIVE SHFT RETAINER SMAL	HUNTER / F70

PC201002-1001-A1	FUEL INJECTOR OIL SEAL	HUNTER / F70
PC201003-0501-A1	CYLINDER HEAD GASKET	HUNTER / F70
PC201152-0602-A	REAR BUMPER DECORATION RH	HUNTER / F70
PC201071-0401	CLOCK SPRING ASSY	HUNTER / F70
PC201193-0301	HINGE ASSY,RR DOOR,UPR-LH	HUNTER / F70
PC201193-0401	HINGE ASSY,RR DOOR,UPR-RH	HUNTER / F70
PQ201017-0101	MANIFOLD ASSY-EXHAUST	HUNTER / F70
PQ201033-0281	CONVERTER WITH ACCESSORIES	HUNTER / F70
PC201152-0602	TRIM,RR BUMPER,RH	HUNTER / F70
PC201132-0901	FRBUMPERLWRGARNISH	HUNTER / F70
PC201189-0202	LATCH SWITCH,CARGO DOOR	HUNTER / F70
PC201194-0102	PANEL ASSY, FR HOOD	HUNTER / F70
PQ201005-0901-A2	CONNECTING ROD BEARINGS (STANDARD 1)	HUNTER / F70
PC201094-0401	WASHER HOSE ASSY,FR	HUNTER / F70
PC201094-0501	WASHER HOSE ASSY,FR	HUNTER / F70
PQ2016029-0401	FILTER ASM-A/TRANS FLUID	HUNTER / F70
PC201058-0401-A1	PAD,REAR BRAKE,LH	HUNTER / F70
PQ201013-4502-A1	OIL FILTER	HUNTER / F70
G201074-0700-A1	FUEL FILTER ASSY(GASOLINE)	HUNTER / F70
PQ201017-0201	GASKET,EXH MANIFOLD	HUNTER / F70
PQ201033-0101-AA	GASKET ASSY,TC AND CATALYST	HUNTER / F70
PQM201072-0602	KEY ASSY	HUNTER / F70
PC201015-2601	RUBBER HOSE II - CYLINDER HEAD WATER OUTLET	HUNTER / F70
PC201019-4201	BELT COMPRESSOR	HUNTER / F70
PH201128-0501	V" LOGO	HUNTER / F70
PC201098-1201	AIR FILTER,A/C	HUNTER / F70
PC201013-4500	DIESEL FILTER ASSEMBLY	HUNTER / F70
PC201065-1401-A1	SHOCK ABSORBER ASSY,RR	HUNTER / F70
PC201071-0202	WIPER COMBINATION SWITCH ASSY	HUNTER / F70
PC201080-0701	TAIL LAMP,LH	HUNTER / F70
PC201080-1001	TAIL LAMP,RH	HUNTER / F70

PC201193-0101	HOOD HINGE ASSY,LH	HUNTER / F70
PC201085-0101	ENGINE HARNESS ASSY	HUNTER / F70
PC201131-0201	FRBUMPERASSY	HUNTER / F70
PC201139-0101	FR FENDER,LH	HUNTER / F70
PC201139-0501	RR FENDER,LH	HUNTER / F70
PC201139-0201	FR FENDER,RH	HUNTER / F70
PC201139-0601	RR FENDER,RH	HUNTER / F70
PC201188-0601	LATCH ASSY,HOOD	HUNTER / F70
PC201190-0101	HOOD ROD ASSY,LH	HUNTER / F70
PC201190-0201	HOOD ROD ASSY,RH	HUNTER / F70
PC201191-0101	FR COLLISION BEAM ASSY	HUNTER / F70
PC201152-0201	RR BUMPER WITH ACCESSORY ASSY	HUNTER / F70
PC201193-0201	HOOD HINGE ASSY,RH	HUNTER / F70
PJ201097-0102	CONDENSER WITH ACCESSORIES ASSY	HUNTER / F70
PQ201007-0101	COIL ASSY, IGNITION	HUNTER / F70
PC201058-0401	PAD,REAR BRAKE,LH	HUNTER / F70
PC201005-0601	PISTON PIN LOCKING RING	HUNTER / F70
PC201058-0701	PAD,REAR BRAKE,RH	HUNTER / F70
PC201008-2101	OIL MODULE ASSEMBLY	HUNTER / F70
PC201015-4201	EGR COOLER WATER INLET RUBBER HOSE	HUNTER / F70
PC201046-0102	CYLINDER ASSY,BRAKE MASTER	HUNTER / F70
PC201050-0802	COVER,OIL SEAL	HUNTER / F70
PC201050-0901	DISK,FR BRAKE	HUNTER / F70
PC201058-0801	BRAKE DISC,RR	HUNTER / F70
PK201155-0412	MIRRORASSY,OUTRRVIEW,RH	HUNTER / F70
PC201014-0414-A1	EGR PIPE GASKET II	HUNTER / F70
PC201002-0301	FUEL INJECTOR PRESSING BOLT OIL SEAL	HUNTER / F70
PC201002-0601	RECTANGULAR RUBBER CUSHION	HUNTER / F70
PC201010-1601	CAMSHAFT CHAIN	HUNTER / F70
PC201060-2401-A1	BUSHING,FR STABILIZER BAR	HUNTER / F70
PQ201014-0301	CAM POSITION SENSOR	HUNTER / F70
PQ201016-2501	THERMOSTAT, ELECTRONIC	HUNTER / F70

PQ201026-2101	RELEASE BEARING, CLUTCH	HUNTER / F70
PC201194-0102-A1	ENGINE HOOD ASSY	HUNTER / F70
PC201199-0801	RADIATOR BRACKET WELDING ASSY	HUNTER / F70
PC201010-0401	CHAIN TENSIONER ARM - FUEL PUMP AND CRANKSHAFT	HUNTER / F70
PCK201080-0305	FR COMBINATION LAMP,LH	HUNTER / F70
PCK201080-0505	FR COMBINATION LAMP,RH	HUNTER / F70
PCK201101-0153-A2	COMBINED INSTRUMENT ASSY	HUNTER / F70
PCK201186-0201-A1	BACK GLASS ASSY	HUNTER / F70
PQ201014-0601	OXYGEN SENSOR	HUNTER / F70
PK201155-0212	MIRRORASSY,OUTRRVIEW,LH	HUNTER / F70
PH201131-0105	FR BUMPER WITH ACCESSORY ASSY	HUNTER / F70
PH201131-0305	FR BUMPER UPR GRILL ASSY	HUNTER / F70
PJ201019-0201	FILTER ASSY,AIR CLEANER	HUNTER / F70
PQ201018-0201	COVER ASSY,CLUTCH	HUNTER / F70
PC201002-0101	CYLINDER HEAD COVER	HUNTER / F70
PC201002-0401	FUEL INJECTOR SUPPORTING POINT O-RING	HUNTER / F70
PC201013-1101	FUEL INJECTOR	HUNTER / F70
PC201013-1201	END-DUMP RAIL	HUNTER / F70
PC201013-2701	FUEL INJECTOR O-RING	HUNTER / F70
PQ201013-1101	PLUG ASSY,SPARK(DILKR6D11G)	HUNTER / F70
PC201015-1201	THERMOSTAT ASSEMBLY	HUNTER / F70
PC201006-1502	CLUTCH ASSEMBLY	HUNTER / F70
PC201010-0201	OIL PUMP CHAIN	HUNTER / F70
PC201010-0501	HIGH-PRESSURE PUMP CHAIN	HUNTER / F70
PC201010-0901	CHAIN TENSIONER ARM - CAMSHAFT AND FUEL PUMP	HUNTER / F70
PC201010-1401	CHAIN GUIDE PLATE - CAMSHAFT	HUNTER / F70
PC201010-1801	CHAIN GUIDE PLATE - FUEL PUMP AND CRANKSHAFT	HUNTER / F70
PC201022-0101	MOUNT BRACKET ASSY,LH	HUNTER / F70
PC201022-0901	MOUNT BRACKET ASSY,RH	HUNTER / F70
PC201012-1201	INTER COOLER INLET TUBE ASSY	HUNTER / F70
PC201013-4001	SPEED SENSOR	HUNTER / F70

PC201022-1101	MOUNT CUSHION ASSY,RH	HUNTER / F70
PC201022-1601	MOUNT BRACKET ASSY,RR	HUNTER / F70
PC201023-1701	MOUNT CUSHION ASSY,RR	HUNTER / F70
PC201013-3201-A1	FUEL RETURN FOURWAY PIPE WELDING PART	HUNTER / F70
PC201044-0202	BRAKE SWITCH LAMP GROUP	HUNTER / F70
PC201050-0301-A3	PAD,FR BRAKE,RH	HUNTER / F70
PC201060-0101-A1	STRUT ASSY,FR-LH	HUNTER / F70
PC201060-0201-A1	STRUT ASSY,FR-RH	HUNTER / F70
PC201060-2101-A1	STABILIZER BAR,FR	HUNTER / F70
PC201065-1401	SHOCK ABSORBER ASSY,RR	HUNTER / F70
PQ201014-0701	OXYGEN SENSOR	HUNTER / F70
PQ201015-0101	PUMP ASSY,WATER	HUNTER / F70
PQ201018-0101	DISC,CLUTCH	HUNTER / F70
PQK20021-0102-A1	RADIATOR WITH ACCESSORIES ASSY	HUNTER / F70
PQK201095-0101	COMPRESSOR ASSY	HUNTER / F70
PC201100-0201	OUTSIDE TEMP SENSOR	HUNTER / F70
PC201050-0201	LEFT FRONT CALIPER ASSEMBLY	HUNTER / F70
PC201053-0201	RIGHT FRONT CALIPER ASSEMBLY	HUNTER / F70
PC201049-0102-A1	BRAKES ACTUACOR ASSY,ESP	HUNTER / F70
PC201105-0901	CAMERAASSY,REVERSE	HUNTER / F70
PC201013-4301	BOSSTPRESSURESENSOR	HUNTER / F70
PK201012-0381	AIR CLEANER ASSY	HUNTER / F70
PQ201013-0401	INJECTOR ASSY, FUEL	HUNTER / F70
PC201058-0701-A1	BRAKE PAD BRANCH UNIT,RR-RH	HUNTER / F70
PC201186-0601	RR DOOR GLASS&BRACKET ASSY,RH	HUNTER / F70
PC201131-2101	FRBUMPERSTRUTMEMBER	HUNTER / F70
PC201186-0301	FR DOOR GLASS&BRACKET ASSY,LH	HUNTER / F70
PC201186-0401	FR DOOR GLASS&BRACKET ASSY,RH	HUNTER / F70
PC201186-0501	RR DOOR GLASS&BRACKET ASSY,LH	HUNTER / F70
PJ201021-0101	RADIATOR WITH ACCESSORIES ASSY	HUNTER / F70
PQ201002-0201	GASKET,ROCKER	HUNTER / F70

to the second se		
PQ201004-1701	OIL SEAL	HUNTER / F70
PQ201008-0301	OIL SEAL	HUNTER / F70
PQ201009-1201	TIMING BELT	HUNTER / F70
PQ201009-1601	PULLEY,IDLER	HUNTER / F70
PQ201009-2001	PULLEY,TENSIONER	HUNTER / F70
PQ201010-0801	TIMING BELT B	HUNTER / F70
PQ201013-0101	BODY ASSY,THRO	HUNTER / F70
PQ201014-1101	MAP/MAT SENSOR	HUNTER / F70
PQ201019-4201	V-RIBBED BELT	HUNTER / F70
PQ201020-0101	STARTER ASSY	HUNTER / F70
PQ201014-0101	CRANKSHAFT POSITION SENSOR	HUNTER / F70
PQ201024-2502	FUEL PUMP ASSY	HUNTER / F70
PH201155-0213	MIRRORASSY,OUTRRVIEW,LH	HUNTER / F70
PH201155-0413	MIRROR ASSY,REARVIEW,RH	HUNTER / F70
PC201152-0201-A1	RR BUMPER WITH ACCESSORY ASSY	HUNTER / F70

SIRS SIRS SIRS SIRS